



ⓐ Fitting Instructions:	FRONTGUARD
ⓓ Montageanleitung:	FRONTBÜGEL
Ⓝ Montagevoorschrift:	FRONTGUARD
ⓕ Instructions de montage:	PARE-BUFFLES
ⓔ Instrucciones de montaje:	DEFENSA DELANTERA BIG BAR
Ⓛ Schema di montaggio:	PROTEZIONE FRONTALE CENTRALE
Ⓢ Manual:	FRONTBÅGE

Nissan X-Trail 2003



Type Nr.: ZR/15/A, ZR/15B
Best.-Nr.: NIS1641EC, NIS1643EC




45 Min.



All rights reserved to modify the text

Type Nr.: ZR/15/A, ZR/15B

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
 Herramientas necesarias / Utensile necessarie / Verktuyg somsokrävs

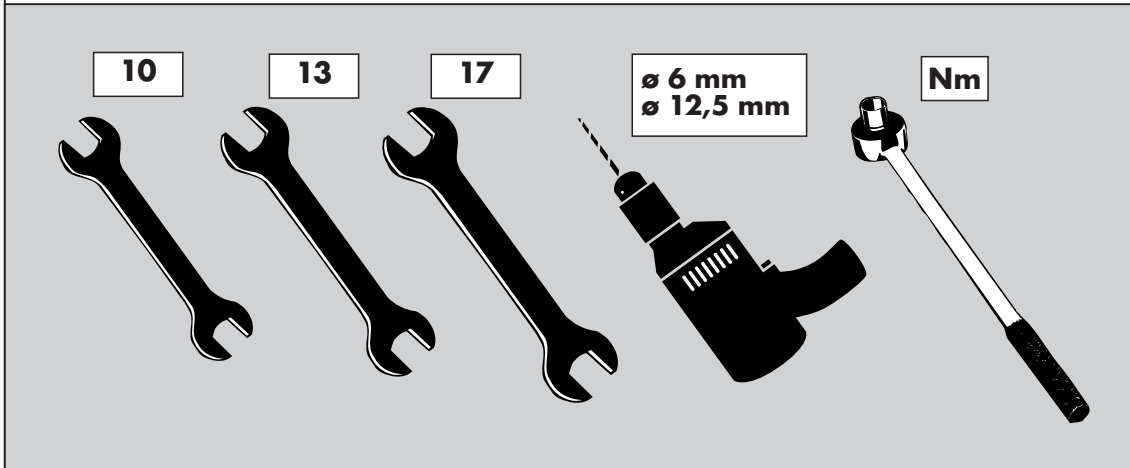

COBRA
 TECHNOLOGY & LIFESTYLE

■ Fitting Instructions: FRONTGUARD
 ■ Montageanleitung: FRONTBÜGEL
 ■ Montagevoorschrift: FRONTGUARD
 ■ Instructions de montage: PARE-BUFFLES
 ■ Instrucciones de montaje: DEFENSA DELANTERA BIG BAR
 ■ Schema di montaggio: PROTEZIONE FRONTALE CENTRALE
 ■ Manual: FRONTBÄGE

Nissan X-Trail 2003













Type Nr.: ZR/15/A, ZR/15B
 Best.-Nr.: N51641EC, N51642EC

45 Min.

TW
 All rights reserved to modify the text

1 ISSUE 2 29.11.2007

Parts list / Teileliste / Onderdelenlijst / Liste de pièces
 Lista de accesorios / Lista di pezzi / Artikel lista

1		1 x	7	 M 8	2 x
2	 Halterung unten	2 x	8	 ø 8,4	2 x
3	 ø 17 x 3 x 13	2 x	9	 ø 8,1	2 x
4	 M 10 x 1,25 x 40	2 x	10	 M 6	2 x
5	 ø 10,2	2 x	11	 M 6 x 25	2 x
6	 M 8 x 20	2 x	12	 ø 6,1	2 x

