



Ⓜ Fitting Instructions:	FRONTGUARD
Ⓝ Montageanleitung:	FRONTBÜGEL
Ⓝ Montagevoorschrift:	FRONTGUARD
Ⓜ Instructions de montage:	PARE-BUFFLES
Ⓜ Instrucciones de montaje:	DEFENSA DELANTERA BIG BAR
Ⓜ Schema di montaggio:	PROTEZIONE FRONTALE CENTRALE
Ⓜ Manual:	FRONTBÅGE

Toyota Land Cruiser V8 2008 →



Type Nr.: J20/1/A
Best.-Nr.: TOY 1421EC




30 Min.



All rights reserved to modify the text

Type Nr.: J20/1/A

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
 Herramientas necesarias / Utensile necessarie / Verktuyg somskrävs

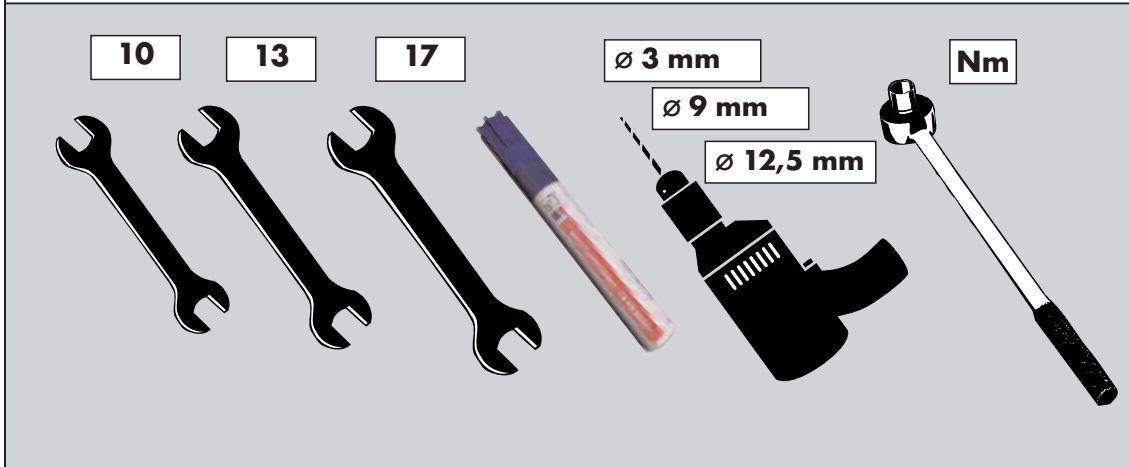

COBRA
 TECHNOLOGY & LIFESTYLE

® Fitting Instructions: FRONTGUARD
 ® Montageanleitung: FRONTBÜGEL
 ® Montagevoorschrift: FRONTGUARD
 ® Instructions de montage: PARE-BUFFLES
 ® Instrucciones de montaje: DEFENSA DELANTERA BIG BAR
 ® Schema di montaggio: PROTEZIONE FRONTALE CENTRALE
 ® Manual: FRONTBAGE

Toyota Land Cruiser V8 2008→

Type Nr.: J20/1/A
 Best.-Nr.: TOY 1421EC

30 Min.

10.07.2008

ISSUE 1

**Parts list / Teileliste / Onderdelenlijst / Liste de pièces
 Lista de accesorios / Lista di pezzi / Artikel lista**

1		1 x	6		2 x
2		2 x	7		2 x
3		2 x	8		2 x
4		2 x	9		2 x
5		2 x	10		2 x

