



CITYGUARD®

- | | |
|----------------------------|---------------------------|
| ⓐ Fitting Instructions | ⓓ Montageanleitung |
| Ⓝ Montagevoorschrift | ⓔ Instructions de montage |
| ⓔ Instrucciones de montaje | Ⓛ Schema di montaggio |
| Ⓢ Manual | Ⓡ РУКОВОДСТВО ПО МОНТАЖУ |

Nissan Pathfinder R51 2005→ Nissan Navara D40 2005→



Type Nr.: R51/B
Best.-Nr.: NIS 1703



60 Min.





All rights reserved to modify the text







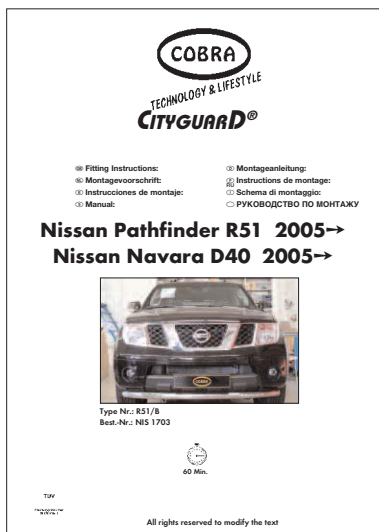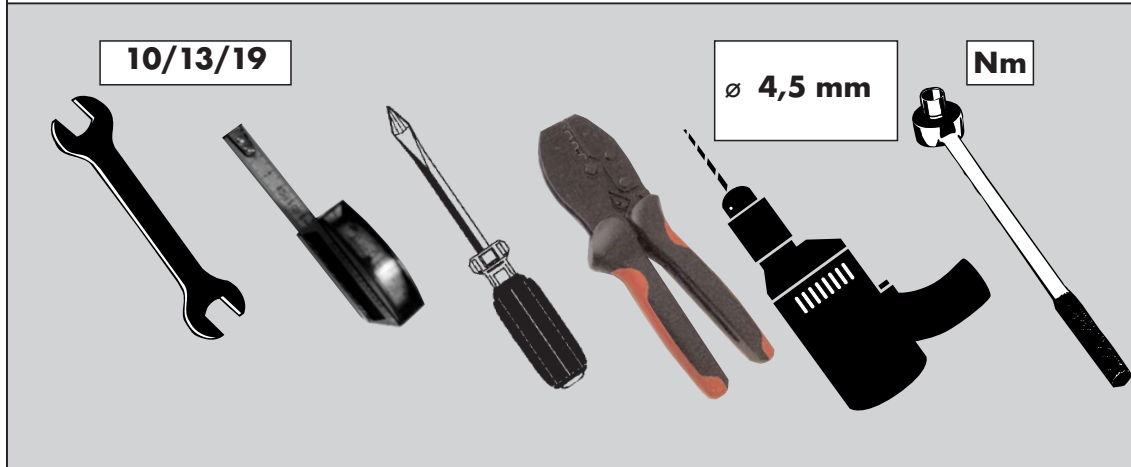





ISSUE 1








Type Nr.: R51/B

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verktøy somskrævs / Необходимые инструменты



Parts list / Teileliste / Onderdelenlijst / Liste de pièces
Lista de accesorios / Lista di pezzi / Artikel lista / Список частей

1	 CITYGUARD®	1 x	10	 ø 8,4	2 x
2	 Halter	2 x	11	 ø 8,1	2 x
3	 Gegenplatte	1 x	12	 M 8	2 x
4	 M 12 x 1,25 x 30	1 x	13	 ø 4,8 x 19	4 x
5	 ø 12,2	1 x	14	 ø 4,2	4 x
6	 M 6 x 35	2 x	15	 195 x 4,7	5 x
7	 ø 6,1	2 x	16	 1,0 -2,5 mm	2 x
8	 ø 8,1/20 x 12,5	2 x	17	 Kabelbaum	1 x
9	 M 8 x 20	2 x	18	 Driver	2 x

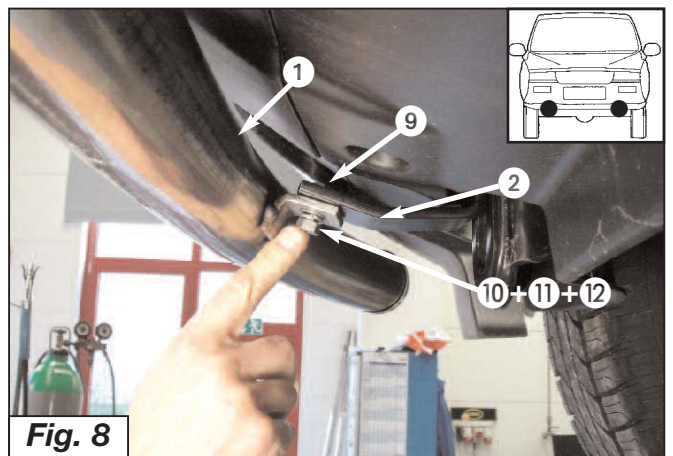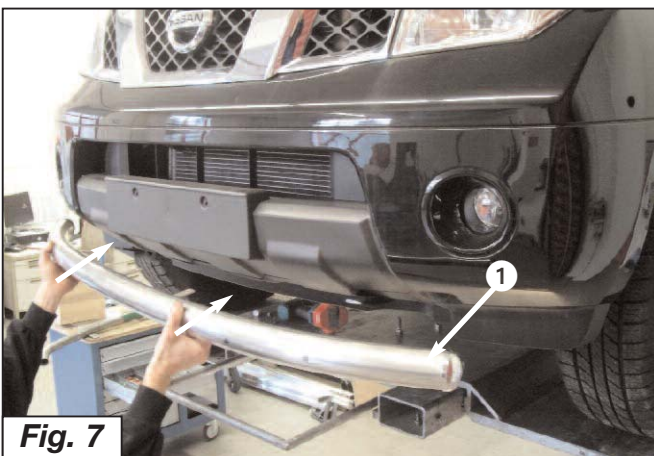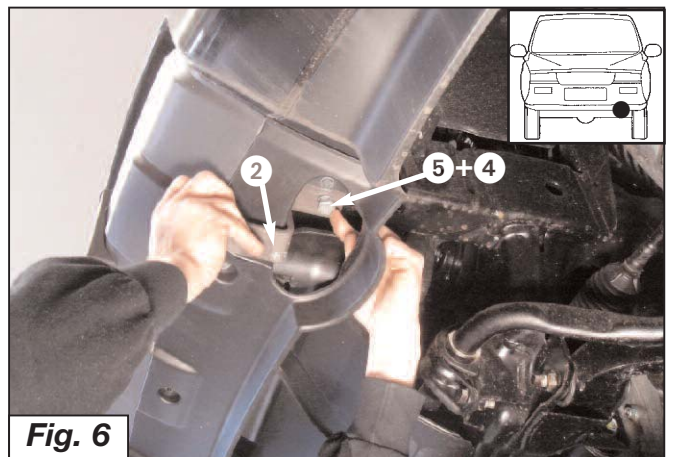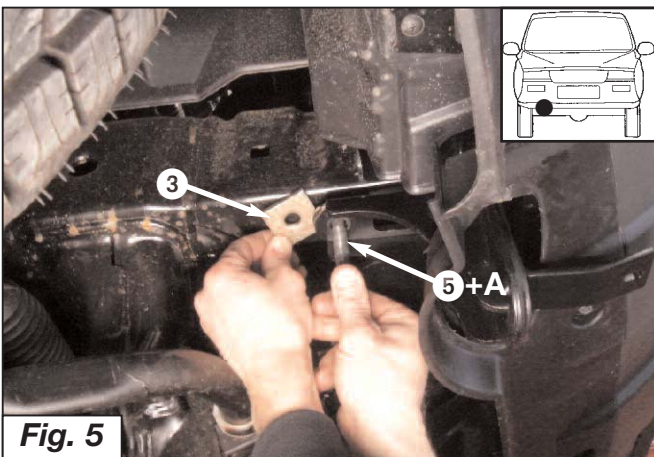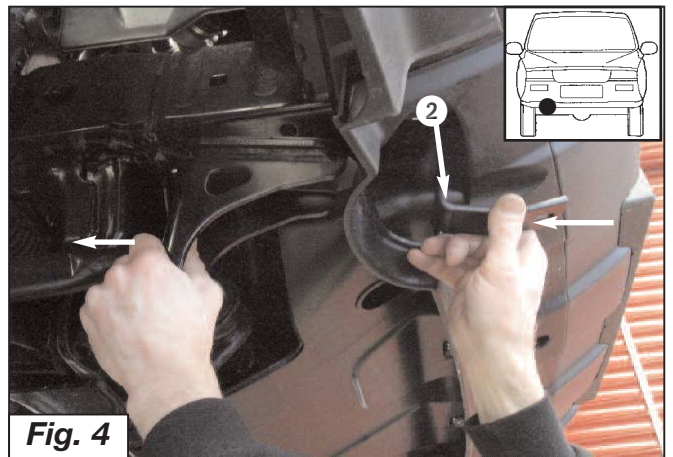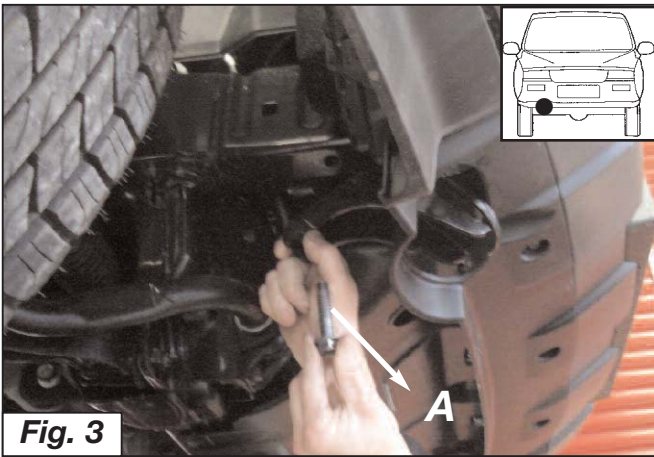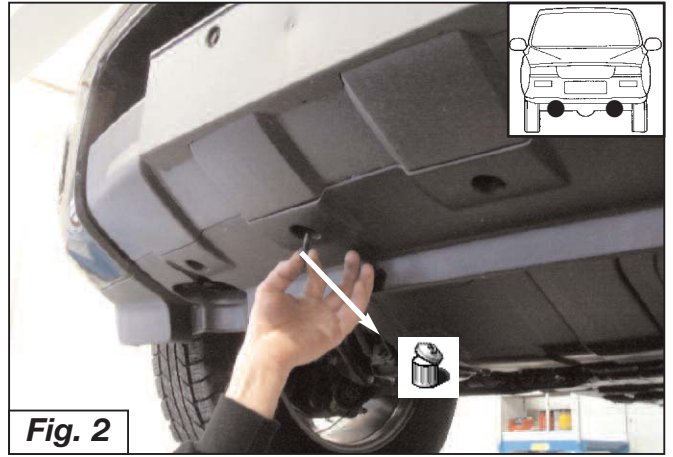

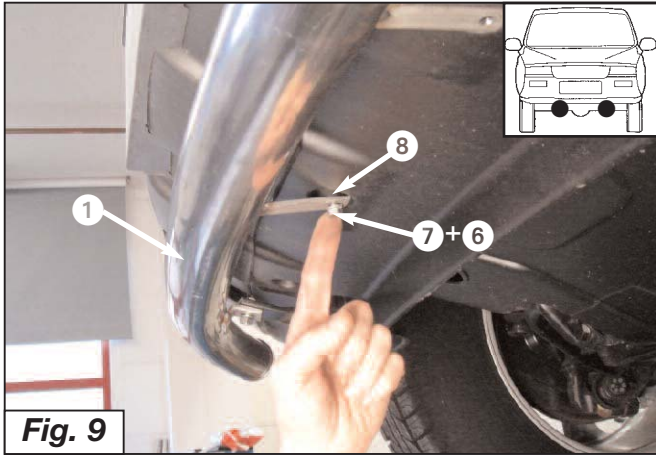


Fig. 9



Fig. 10

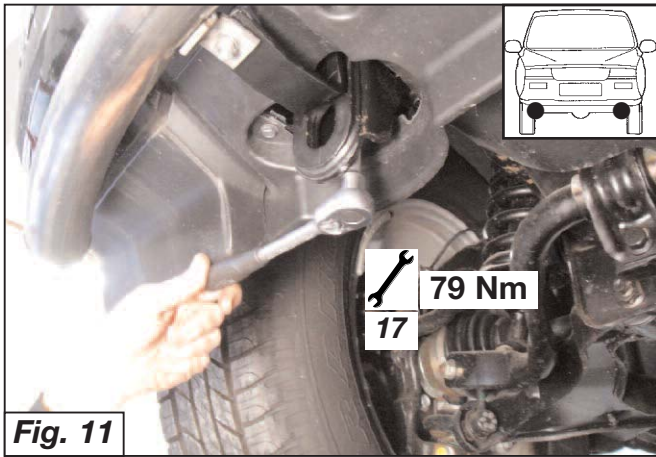


Fig. 11

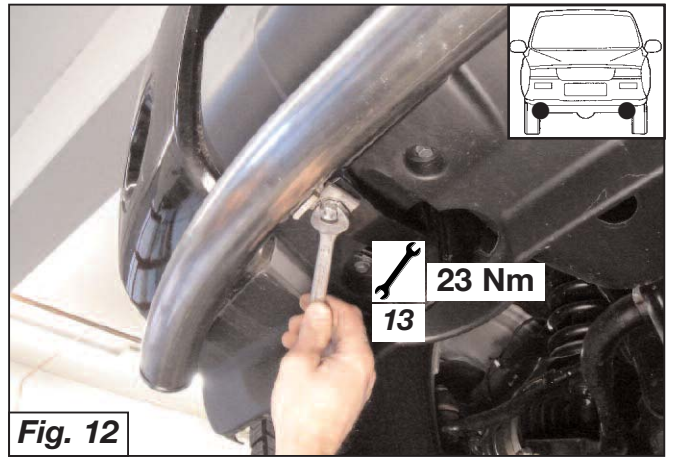


Fig. 12

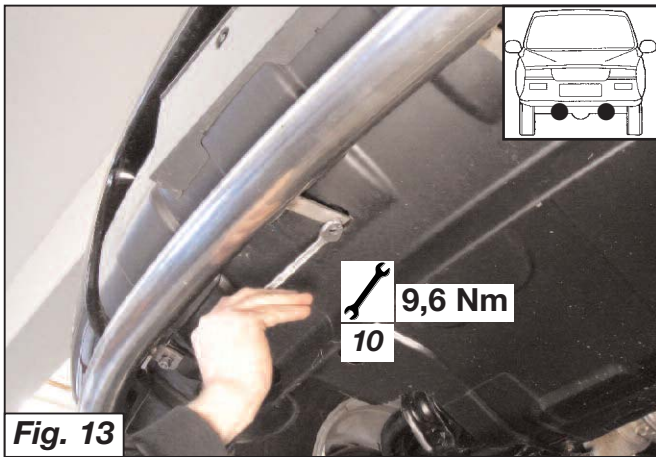


Fig. 13

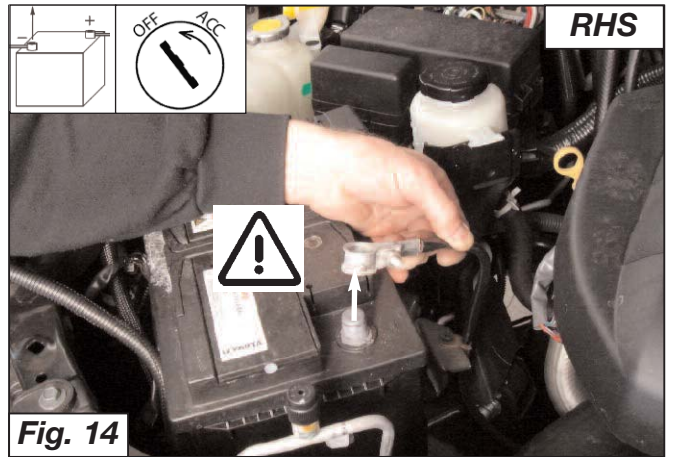


Fig. 14

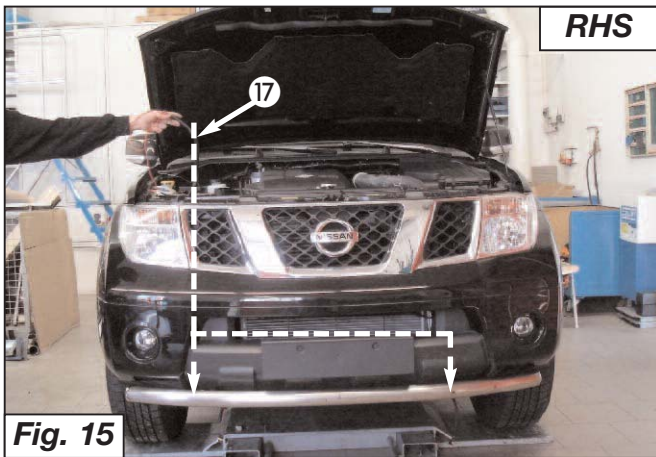


Fig. 15









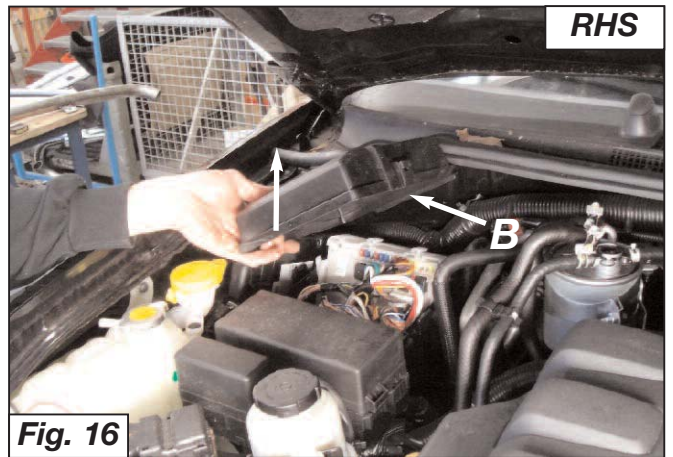


Fig. 16

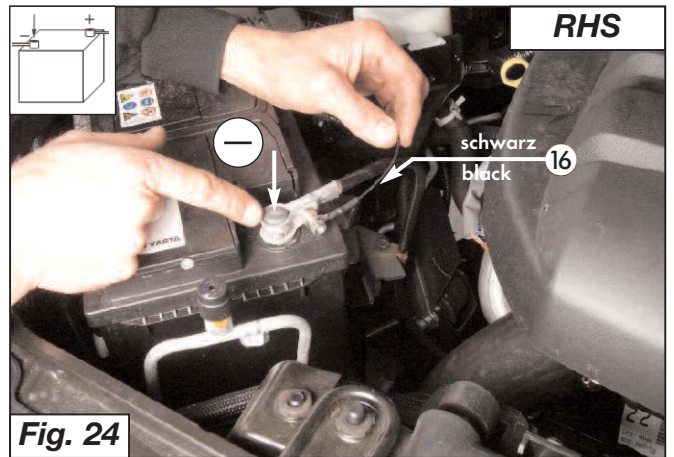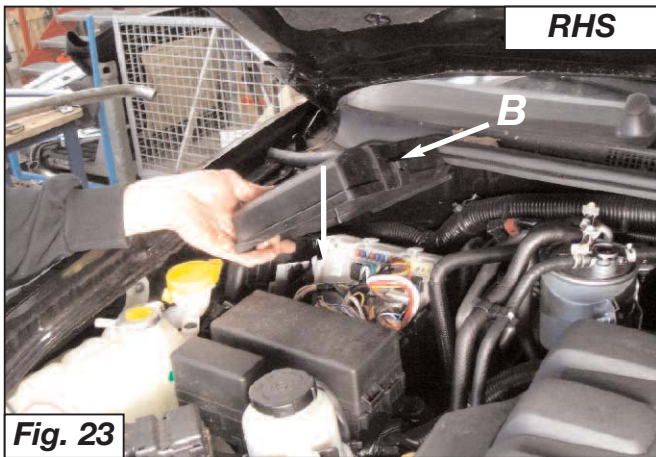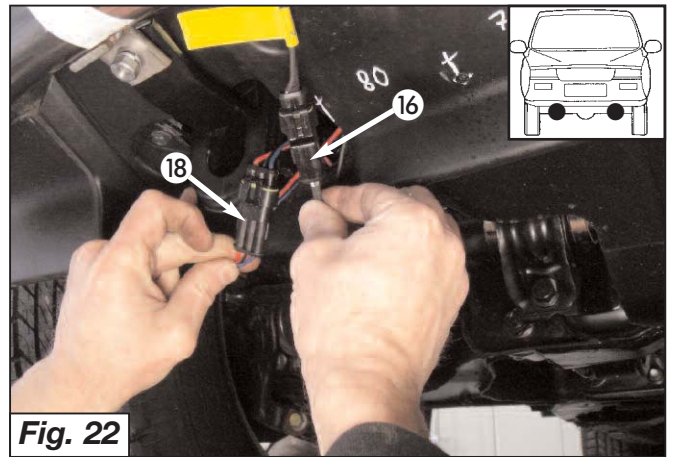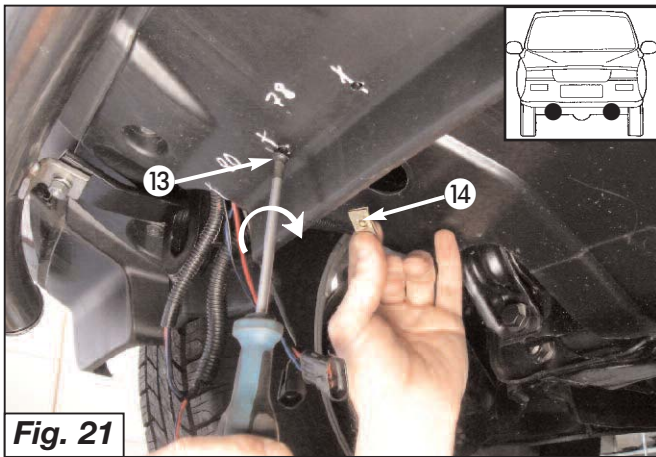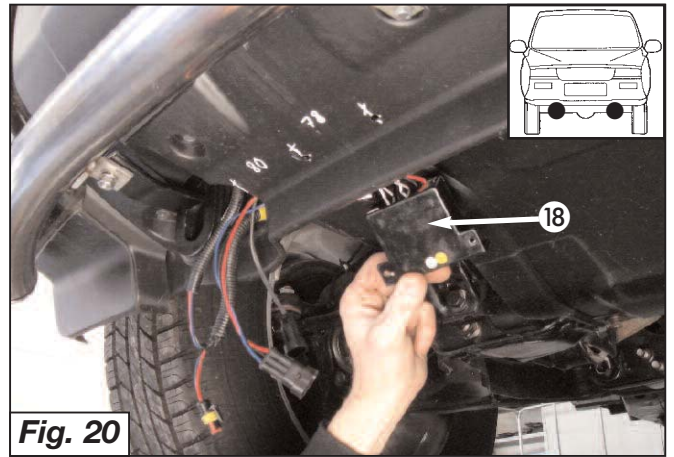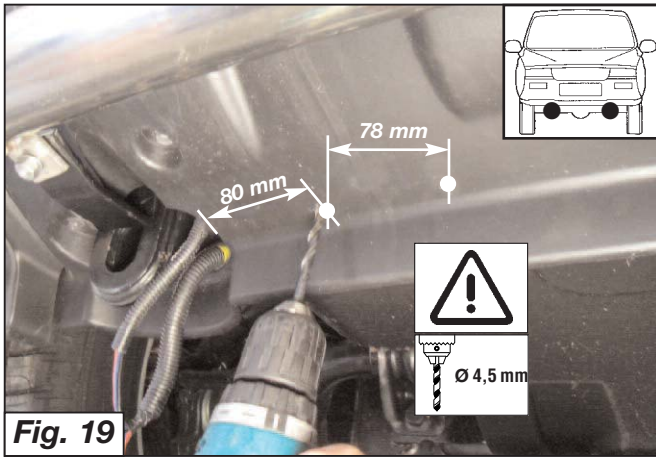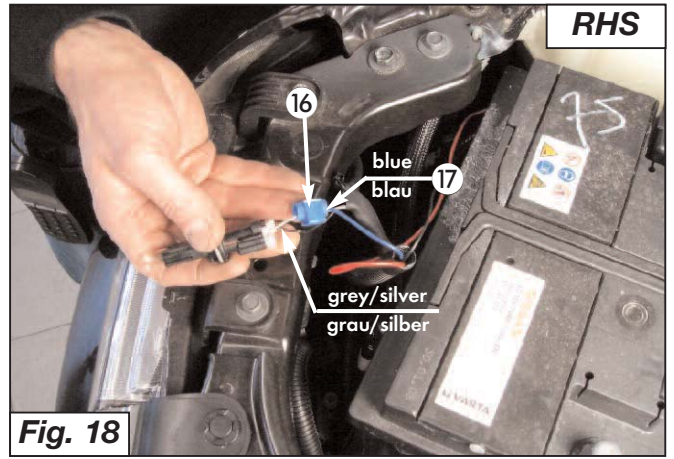

driving direction →

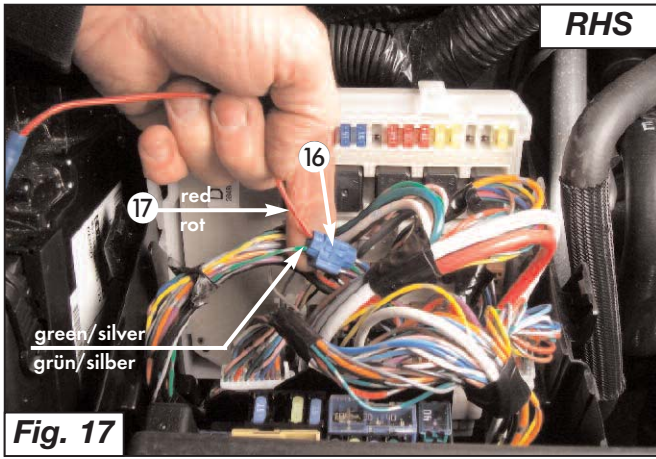