

Ⓒ	Fitting Instructions:	FRONTGUARD
Ⓓ	Montageanleitung:	FRONTBÜGEL
Ⓝ	Montagevoorschrift:	FRONTGUARD
Ⓕ	Instructions de montage:	PARE-BUFFLES
Ⓔ	Instrucciones de montaje:	DEFENSA DELANTERA BIG BAR
Ⓛ	Schema di montaggio:	PROTEZIONE FRONTALE CENTRALE
Ⓢ	Manual:	FRONTBÅGE
Ⓡ	РУКОВОДСТВО ПО МОНТАЖУ:	ПЕРЕДНЯЯ ЗАЩИТА

Nissan NV200 2010➔



Type Nr.: M20/1/A
Best.-Nr.: NIS 1581EC




45 Min.



All rights reserved to modify the text

Type Nr.: M20/1/A

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verktuyg somsomkrävs / Необходимые инструменты

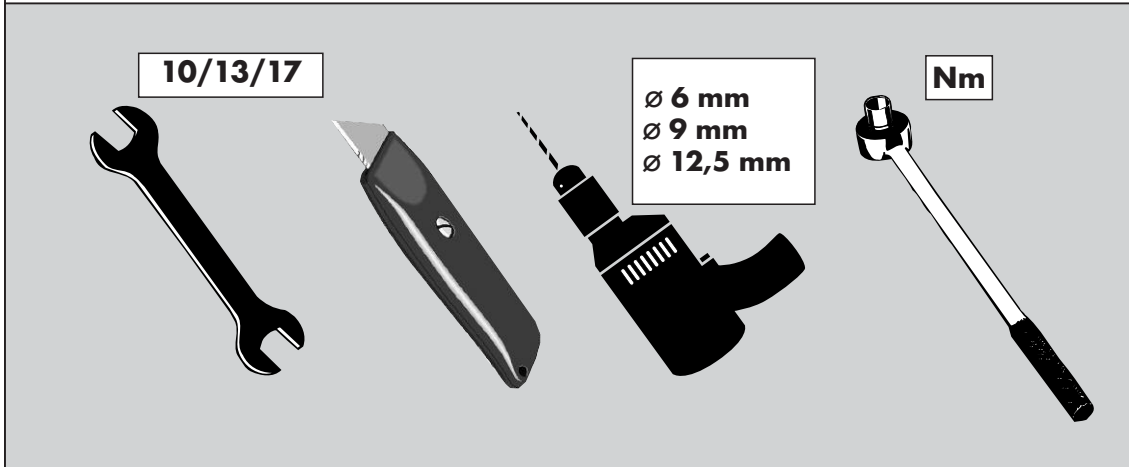

COBRA
NF

● Fitting Instructions: FRONTGUARD
 ● Montageanleitung: FRONTBÜGEL
 ● Montagevoorschrift: FRONTGUARD
 ● Instrucciones de montaje: PARE-BUFFLES
 ● Istruzioni di montaggio: DIFENSA DELANTERA BIG BAR
 ● Schema di montaggio: PROTEZIONE FRONTALE CENTRALE
 ● Manual: FRONTBÜGE
 ● РУКОВОДСТВО ПО МОНТАЖУ: ПЕРЕДНЯЯ ЗАЩИТА

Nissan NV200 2010→

Type Nr.: M20/1/A
Best.-Nr.: NIS 1581EC

45 Min.

TUV

All rights reserved to modify the text

ISSUE 1 06.01.2010

Parts list / Teileliste / Onderdelenlijst / Liste de pièces
Lista de accesorios / Lista di pezzi / Artikel lista / Список частей

1		1 x	6		2 x
2		2 x	7		2 x
3		2 x	8		2 x
4		2 x	9		2 x
5		2 x	10		2 x

