

Ⓞ GB Fitting Instructions:	REAR BUMPER
Ⓞ D Montageanleitung:	HECKSTOSSTANGE
Ⓞ NL Montagevoorschrift:	PROTECTION BAR
Ⓞ F Instructions de montage:	TUBULAIRE ARRIÈRE
Ⓞ E Instrucciones de montaje:	TUBOS TRASERA
Ⓞ I Schema di montaggio:	PARAURTI POSTERIORE
Ⓞ S Manual:	BAK STÖTFÅNGARE

Nissan NV200 2010 →



Type Nr.: M20/5 Ausf.: A
Best.-Nr.: NIS 1591



30 Min.




All rights reserved to modify the text

ISSUE 1

06.01.2010

Type Nr.: M20/5 Ausf.: A

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
Herramientas necesarias / Utensile necessarie / Verktuyg somsomkrävs

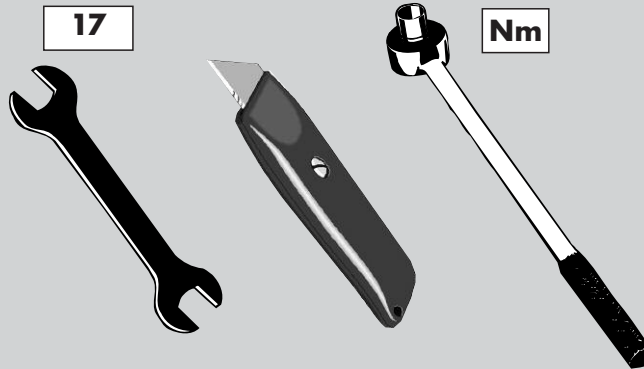

- ⊗ Fitting Instructions: REAR BUMPER
- ⊗ Montageanleitung: HECKSTOSSTANGE
- ⊗ Montagevoorschrift: PROTECTION BAR
- ⊗ Instructions de montage: TUBULAIRE ARRIÈRE
- ⊗ Instruções de montagem: TUBOS TRASERA
- ⊗ Schema di montaggio: PARAURTI POSTERIORE
- ⊗ Manual: BAK STÖTFÄNGARE

Nissan NV200 2010→



Type Nr.: M20/5 Ausf.: A
Best.-Nr.: NIS 1591



30 Min

TUV





All rights reserved to modify the text

1

ISSUE 1

06.01.2010

Parts list / Teileliste / Onderdelenlijst / Liste de pièces
Lista de accesorios / Lista di pezzi / Artikel lista

 1 1 x	 3 M 10 x 25 4 x
 2 M 10 2 x	 4 ø 10,2 4 x

