

GB	Fitting Instructions:	SIDE BAR
D	Montageanleitung:	SCHWELLERROHR
NL	Montagevoorschrift:	SIDE BAR
F	Instructions de montage:	MARCHE-PIEDS
E	Instrucciones de montaje:	JUEGO PROT. DE PARA. TRASERA
I	Schema di montaggio:	PEDANE LATERALI
S	Manual:	SIDOFOTSTEG
RUS	РУКОВОДСТВО ПО МОНТАЖУ:	ПОРОГИ ТРУБООБРАЗНЫЕ
CZ	Montážní návod:	BOČNÍ TRUBKOVÝ RÁM

Nissan NV200 2010→



Type Nr.: M20/3 Ausf.: A
Best.-Nr.: NIS 1587





30 Min.



All rights reserved to modify the text

Type Nr.: M20/3 Ausf.: A

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verktyg somskrävs / Необходимые инструменты / Potrebné náradí

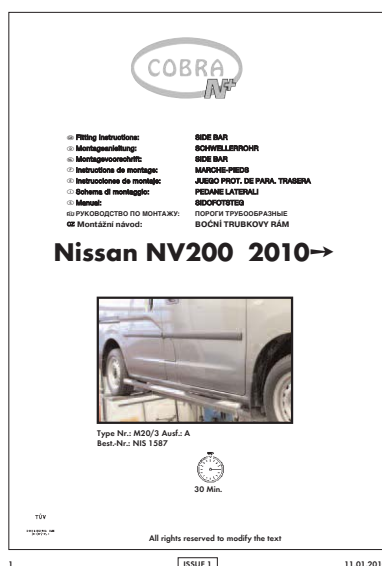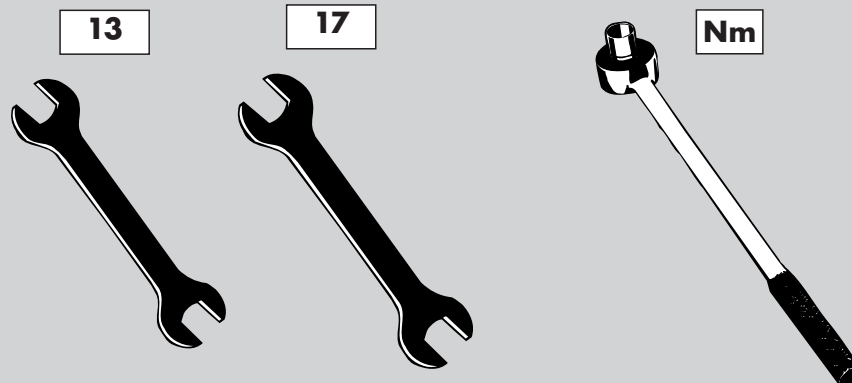

Parts list / Teileliste / Onderdelenlijst / Liste de pièces / Lista de accesorios / Lista di pezzi / Artikel lista / Список частей / Seznam dílů

		2 x	
 Front	2 x	 ø 10,2	6 x
 Rear	2 x	 ø 10,4	2 x
 M 8 x 25	2 x	 M 10	4 x
 30 x 5 x 50	2 x	 M 10 x 25	4 x
 M 10 x 30 x 8 x 60	2 x	 M 8 x 25	4 x
 ø 17 x 3 x 8	2 x	 ø 8,1	6 x
 M 10 x 25	2 x	 M 8	6 x

