



ⓖ	Fitting Instructions:	FRONTGUARD
Ⓓ	Montageanleitung:	FRONTBÜGEL
Ⓝ	Montagevoorschrift:	FRONTGUARD
Ⓕ	Instructions de montage:	PARE-BUFFLES
Ⓔ	Instrucciones de montaje:	DEFENSA DELANTERA BIG BAR
Ⓜ	Schema di montaggio:	PROTEZIONE FRONTALE CENTRALE
Ⓢ	Manual:	FRONTBÅGE

FORD Transit



Type Nr.: FT/5
Best.-Nr.: FORD1251EC




45 Min.



All rights reserved to modify the text

Type Nr.: FT/5

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
Herramientas necesarias / Utensile necessarie / Verktuyg somsokrævs

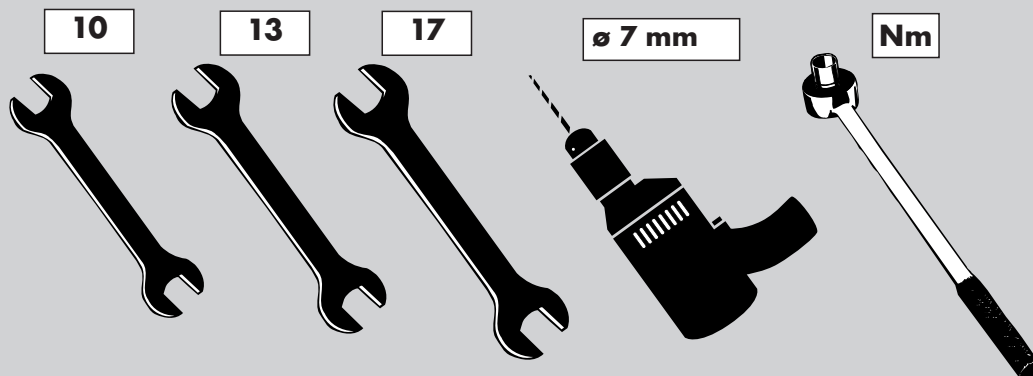

Parts list / Teileliste / Onderdelenlijst / Liste de pièces
Lista de accesorios / Lista di pezzi / Artikel lista

	1 x		M 6	2 x
	2 x		M 8 x 45	2 x
	2 x		M 8 x 20	2 x
	2 x		M 8	2 x
	2 x		ø 8,4	2 x
	4 x		ø 8,1	2 x
	2 x		ø 17 x 3 x 10	2 x
	2 x		ø 20 x 5 x 7,5	2 x

