



CITYGUARD®

- | | |
|----------------------------|---------------------------|
| Ⓒ Fitting Instructions | Ⓓ Montageanleitung |
| Ⓝ Montagevoorschrift | Ⓔ Instructions de montage |
| Ⓔ Instrucciones de montaje | Ⓛ Schema di montaggio |
| Ⓢ Manual | Ⓡ РУКОВОДСТВО ПО МОНТАЖУ |

Mercedes Sprinter 2006→



Type Nr.: MB/22 Ausf.: A
Best.-Nr.: MB 1327




60 Min.



All rights reserved to modify the text

TType Nr.: MB/22 Ausf.: A

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verktuyg somskomkrävs / Необходимые инструменты

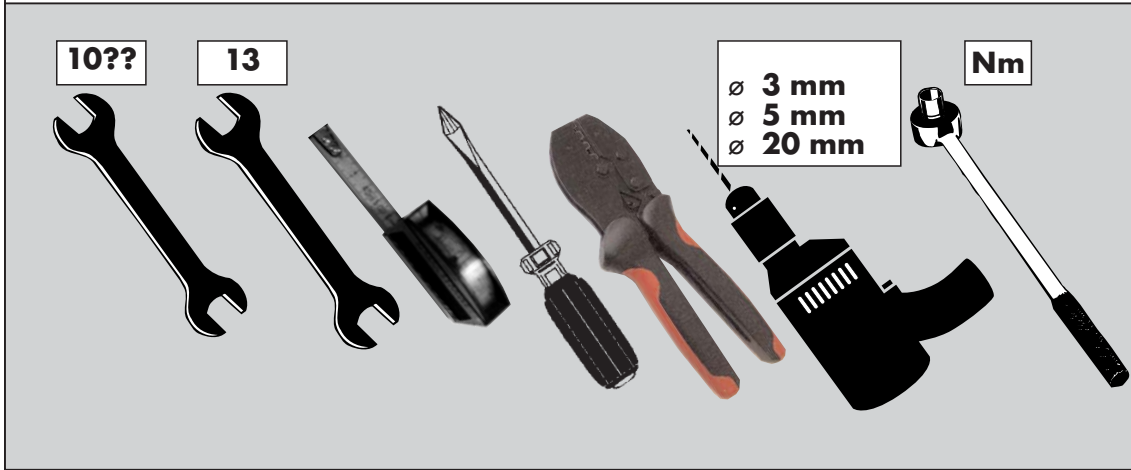


COBRA
TECHNOLOGY & LIFESTYLE

CITYGUARD®

☞ Fitting Instructions: ☞ Montageanleitung:
 ☞ Montagevoorschrift: ☞ Instructions de montage:
 ☞ Instrucciones de montaje: ☞ Schema di montaggio:
 ☞ Manual: ☞ РУКОВОДСТВО ПО МОНТАЖУ

Mercedes Sprinter 2006→

















Type Nr.: MB/22 Ausf.: A
Bed.-Nr.: MB 1327








60 Min.









All rights reserved to modify the text








1 ISSUE 1 22.04.2007

Parts list / Teileliste / Onderdelenlijst / Liste de pièces
Lista de accesorios / Lista di pezzi / Artikel lista / Список частей

1	 CITYGUARD®	1 x	8	 M 6	1 x
2	 Halter	2 x	9	 ø 4,8 x 19	4 x
3	 ø 17 x 3 x 8	2 x	10	 ø 4,2	4 x
4	 M 8 x 30	4 x	11	 195 x 4,7	5 x
5	 ø 8,4	4 x	12	 1,0 -2,5 mm	2 x
6	 ø 8,1	2 x	13	 Kabelbaum	1 x
7	 M 8	2 x	14	 Driver	2 x

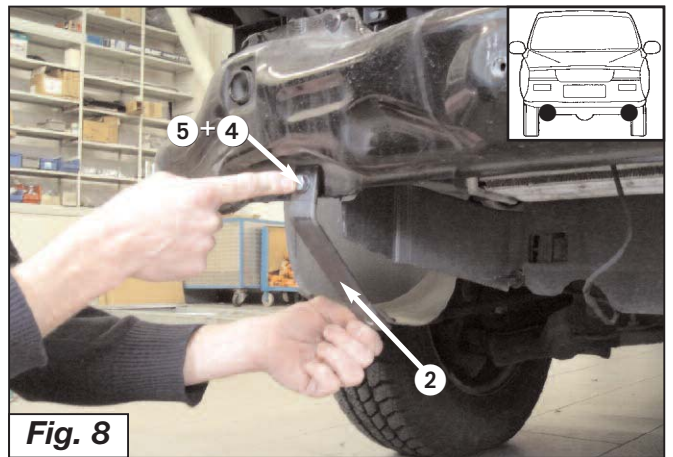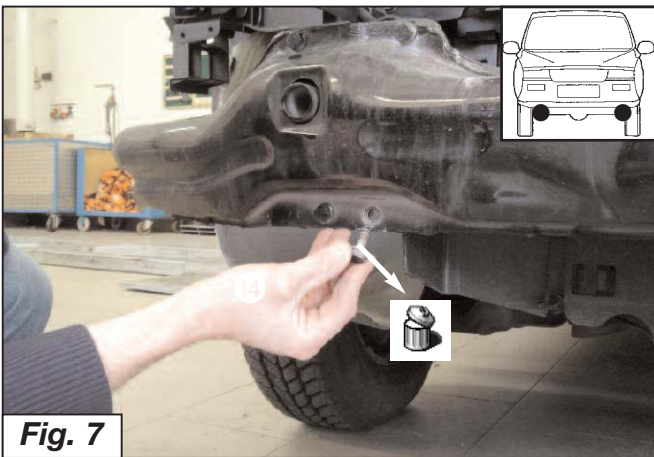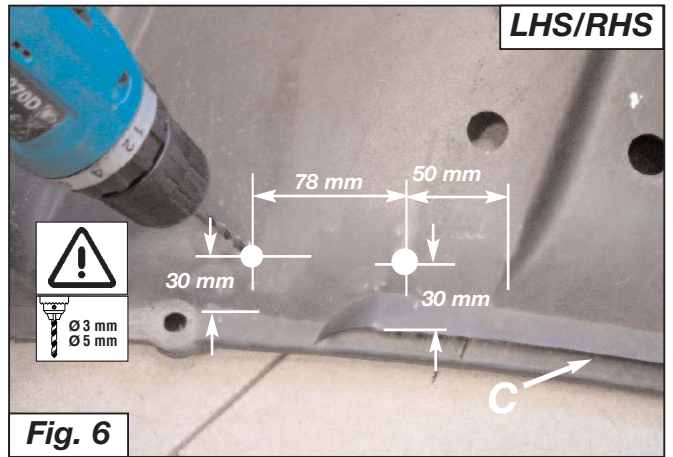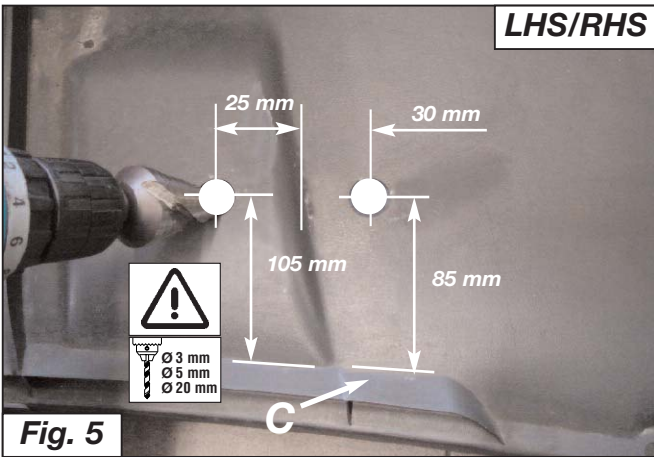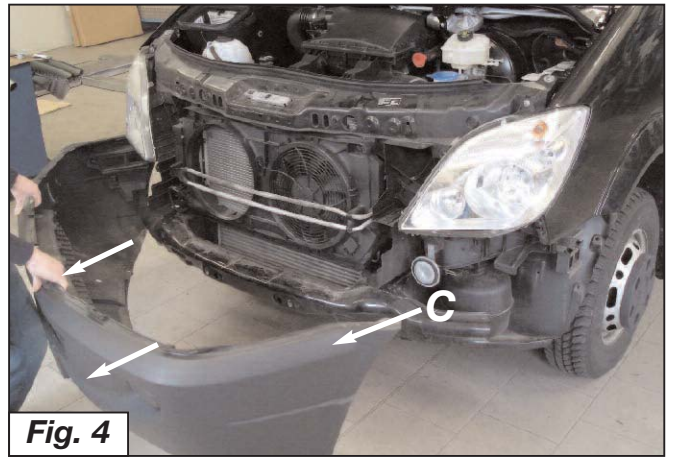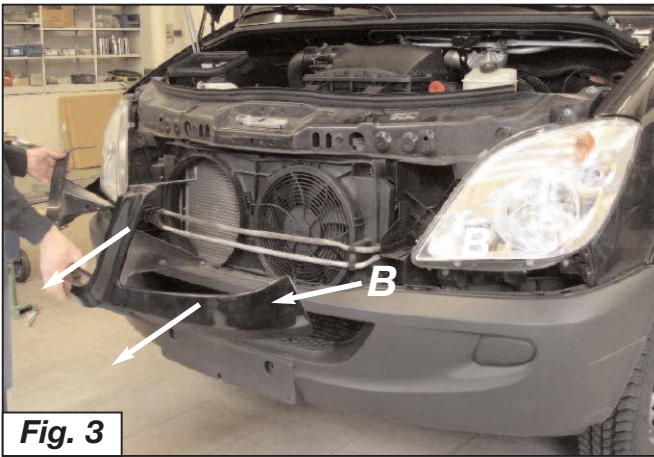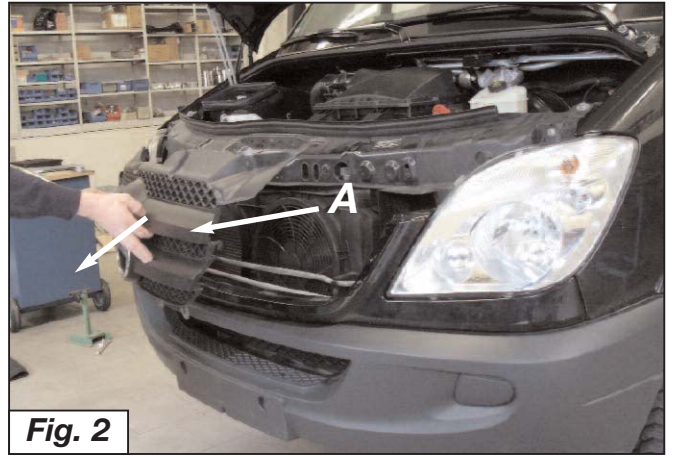

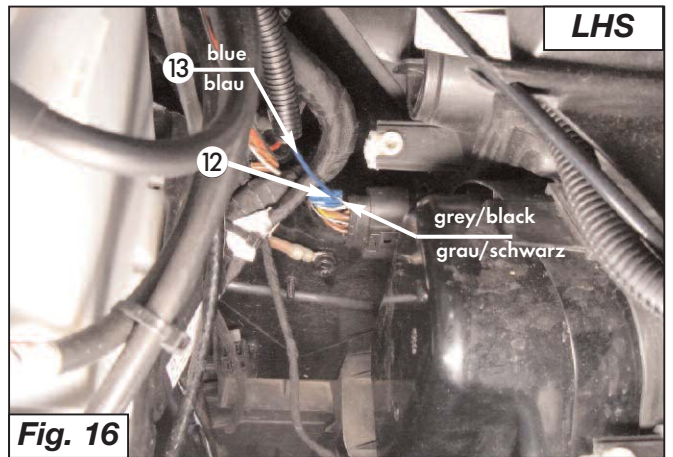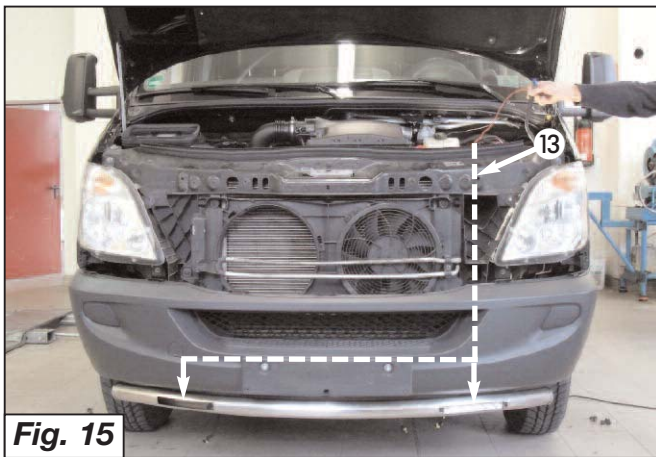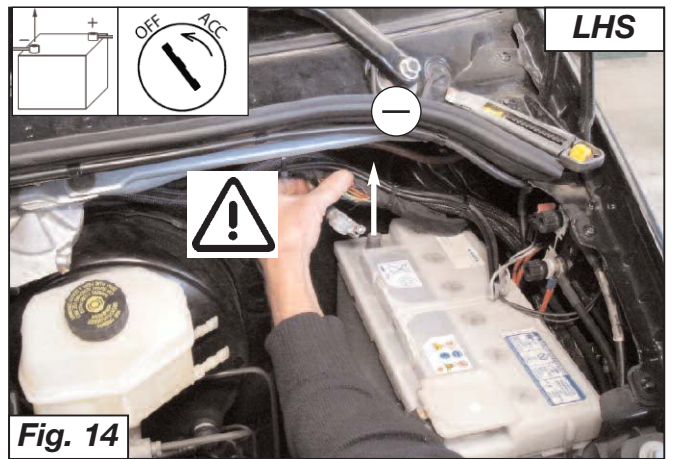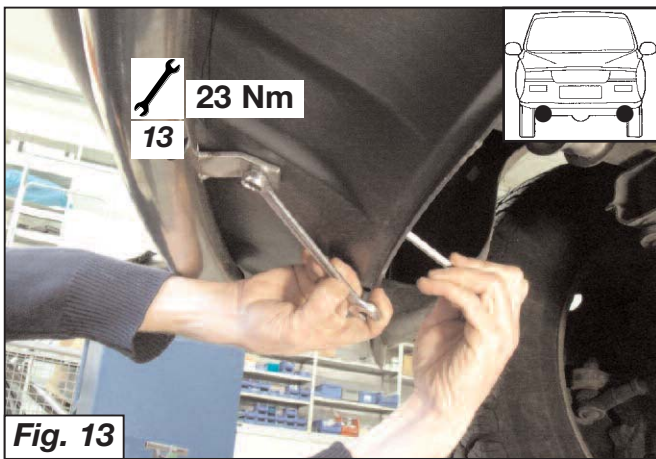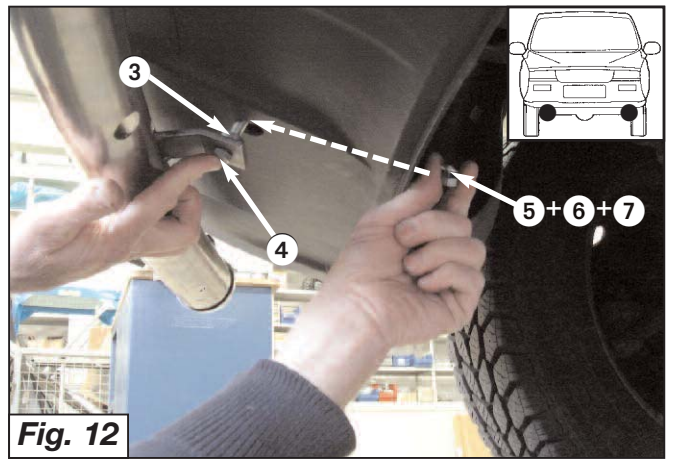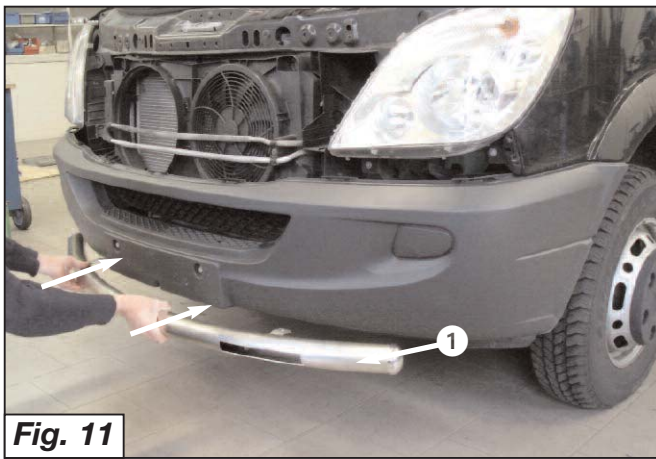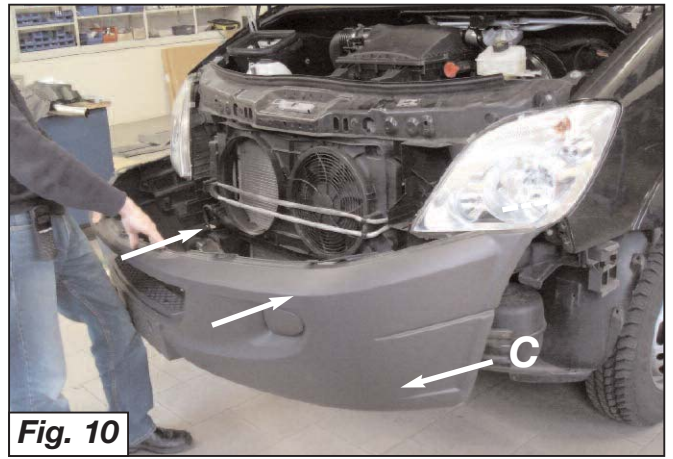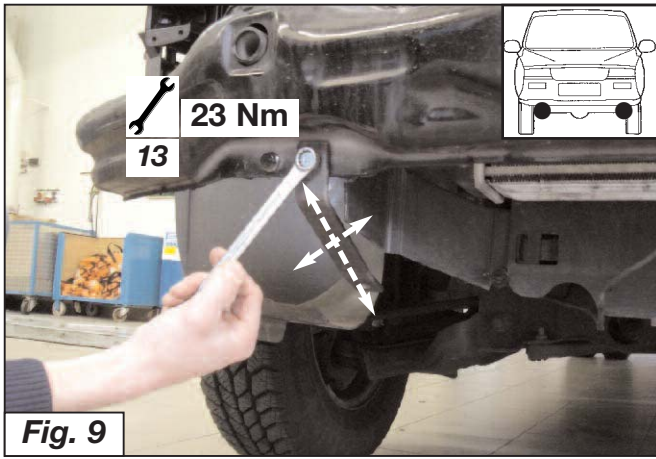

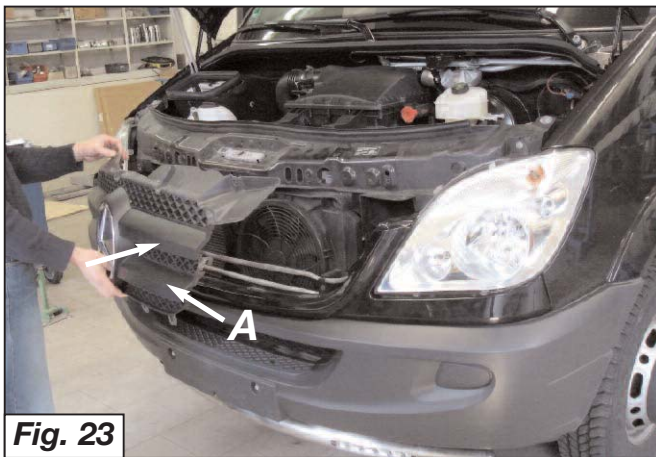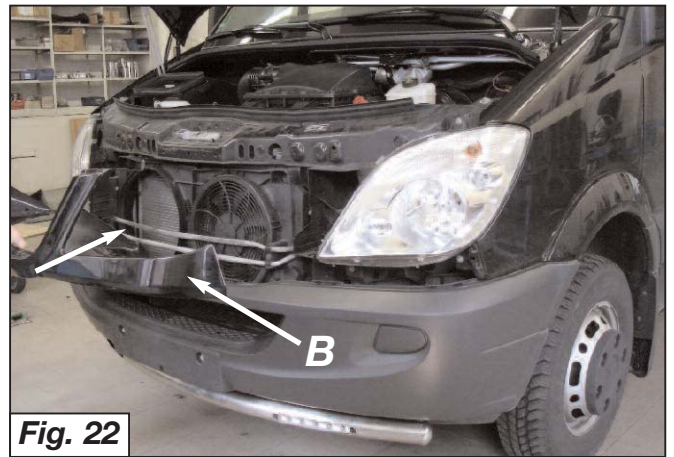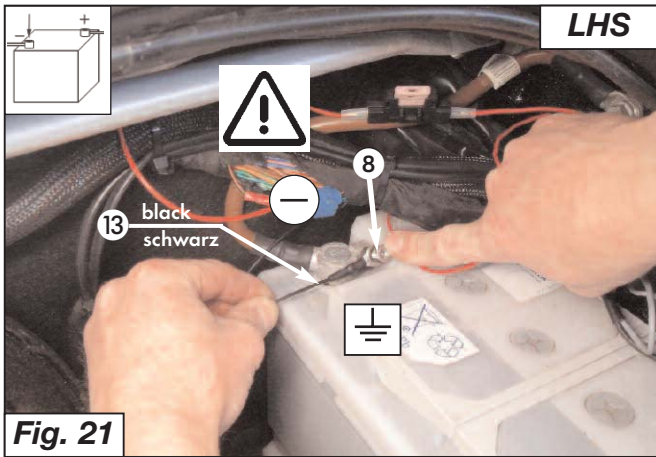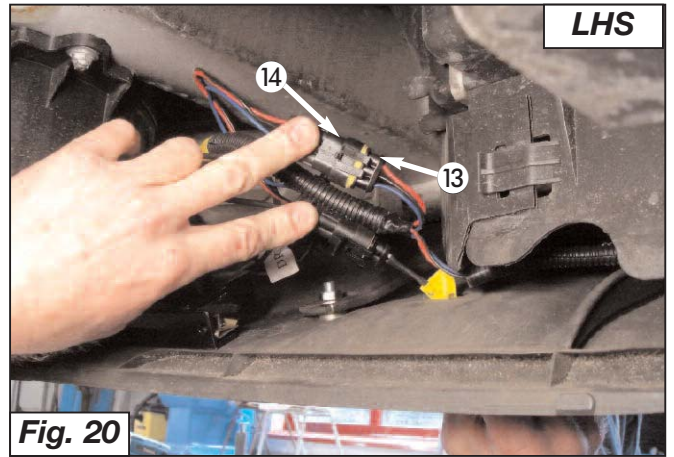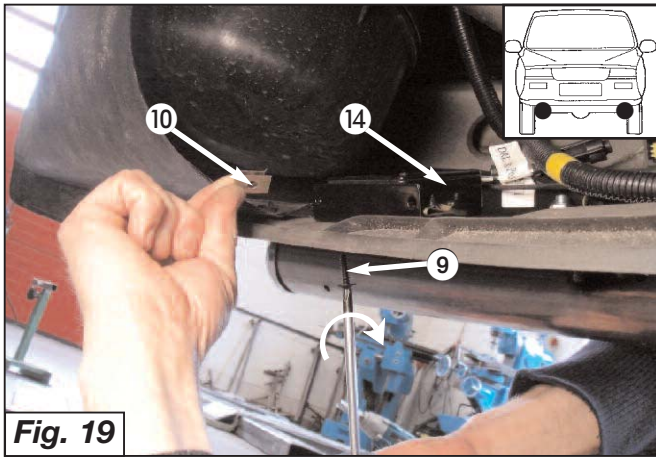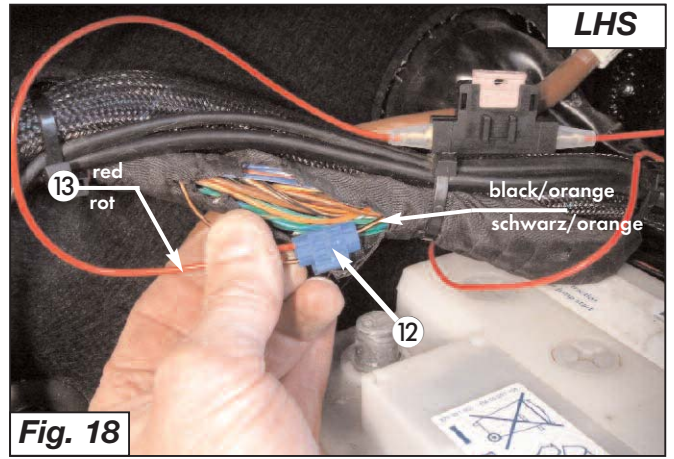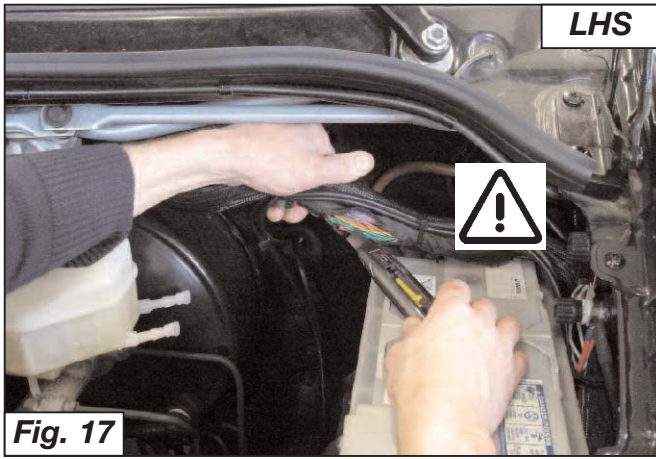

← driving direction

