



GB	Fitting Instructions:	SIDE BAR
D	Montageanleitung:	SCHWELLERROHR
NL	Montagevoorschrift:	SIDE BAR
F	Instructions de montage:	MARCHE-PIEDS
E	Instrucciones de montaje:	JUEGO PROT. DE PARA. TRASERA
I	Schema di montaggio:	PEDANE LATERALI
S	Manual:	SIDOFOTSTEG
RUS	РУКОВОДСТВО ПО МОНТАЖУ:	ПОРОГИ ТРУБООБРАЗНЫЕ

Ford Transit Connect 2014→



Type Nr.: FTO/11
Best.-Nr.: FORD 1385; FORD 1387




45 Min.



All rights reserved to modify the text

Type Nr.: FTO/11

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas
necesarias / Utensile necessarie / Verktyg somskrävs / Необходимые инструменты

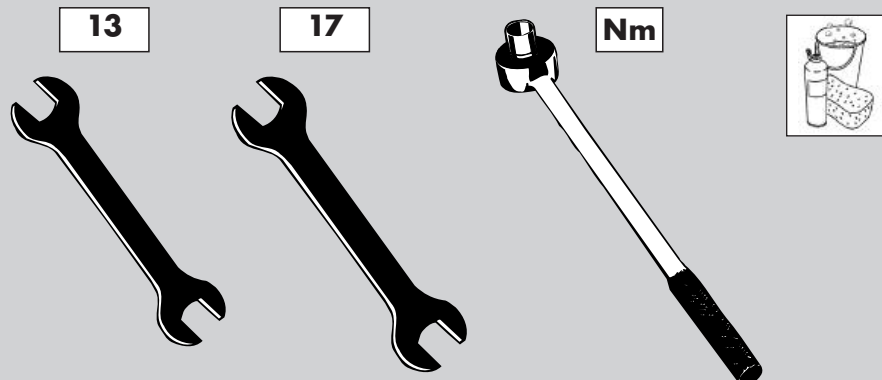

COBRA
TECHNOLOGY & LIFESTYLE

• Fitting Instructions:
 • Montageanleitung:
 • Montagevoorschrift:
 • Instructions de montage:
 • Instrucciones de montaje:
 • Schema di montaggio:
 • Manual:
 • РУКОВОДСТВО ПО МОНТАЖУ:

SIDE BAR
 SCHWELLERROHR
 SIDE BAR
 MARCHÉ-PIEDS
 JUEGO PROT. DE PARA. TRASERA
 PEDANE LATERALI
 SIDOFOTSTEG
 ПОРОГИ ТРУБООБРАЗНЫЕ

Ford Transit Connect 2014→

Type Nr.: FTO/11
Best.Nr.: FORD 1385; FORD 1387

45 Min.

All rights reserved to modify the text

1 **ISSUE 1** 22.10.2014

Parts list / Teileliste / Onderdelenlijst / Liste de pièces
Lista de accesorios / Lista di pezzi / Artikel lista / Список частей

		2 x
	Front	2 x
	Rear	2 x
	M 10 (25 x 8 x 50)	2 x
	M 10 (30 x 8 x 60)	2 x
	M 8 (20 x 6 x 30)	4 x
	M 10 x 25	4 x
	M 8 x 20	4 x
	ø 8,2	4 x
	M 10 x 25	4 x
	M 10	4 x
	ø 10,5	4 x
	ø 10,2	8 x

