


VOLVO FH&FM 2008-2013 with NAVI

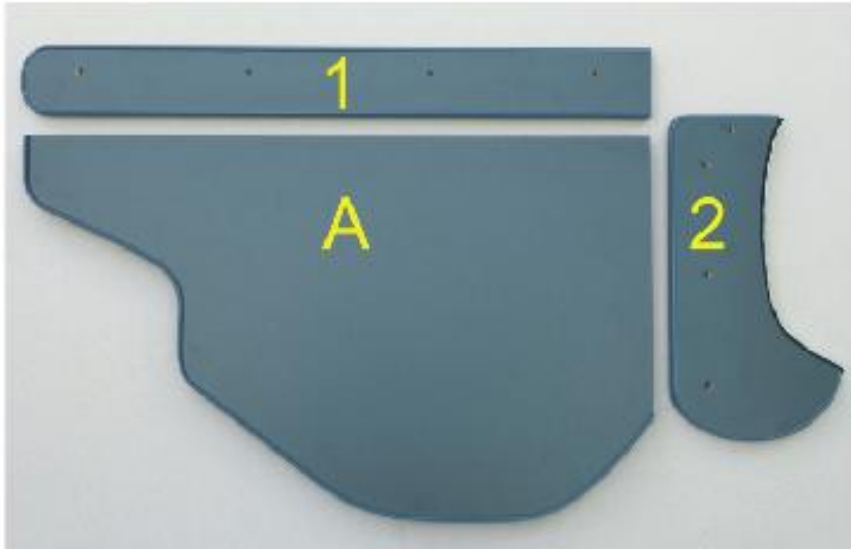

Shelf instalation:

- 1) Screw the detail 1 to the detail A;
- 2) Screw the detail 2 to the detail A.



Volvo shelf instalation:

- 1) Wash the panel with the spirit liquid;
- 2) Put the shelf on the panel;
- 3) Mark shelf sides on the panel with pencil;
- 4) Remove the shelf and stick up the sticky strip on the panel;
- 5) Put the shelf on the panel.

