




Remove cover on backside of seats















Flip out the cover from armrest remove armrest frot seat cover up with special cover and tighten with screw



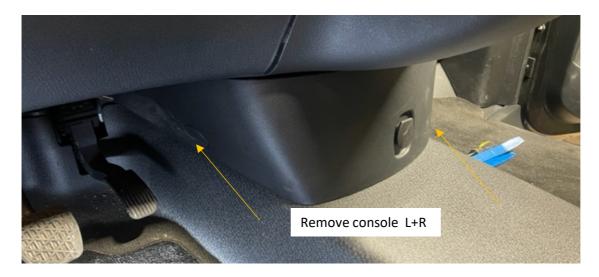

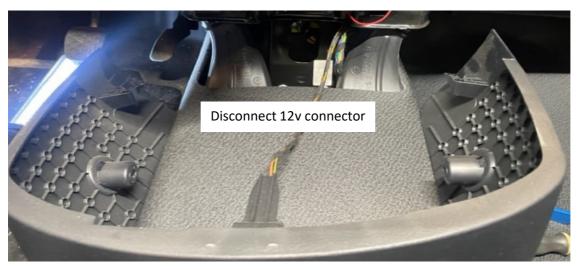






Make 12V connection between your Van and console to make sure your 12V plug and USB wil work



Place console between seats

Make sure this part will slide into the correct guide

The bracket fits into the 4 bolds

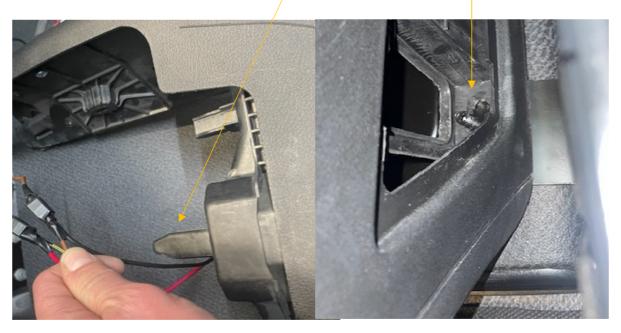



place special nuts on the bolds ans tighten with nuts



Tighten your console with bolds L+R and cover up.

Tighten the bolds from bottem bracket